



INSTALL TIME: 15 mins

1 GET ORGANIZED


you will need:

- Front Runner Braai/BBQ Grate
- Spanner's/Wrench's provided (Item 6)
- Clean dry area to work
- Tape measure

NOTE: Spanner's/Wrench's (Item 6) will be removed from grid and used to assemble Braai/BBQ. Keep with your vehicles tool kit.

Here is what you are looking at::

ITEM	QUANTITY	DESCRIPTION
1	3	LEG
2	3	SPACER
3	3	GRID
4	12	M5 X 20 HEX BOLT
5	12	M5 HEX NUT
6	2	SPANNER/WRENCH

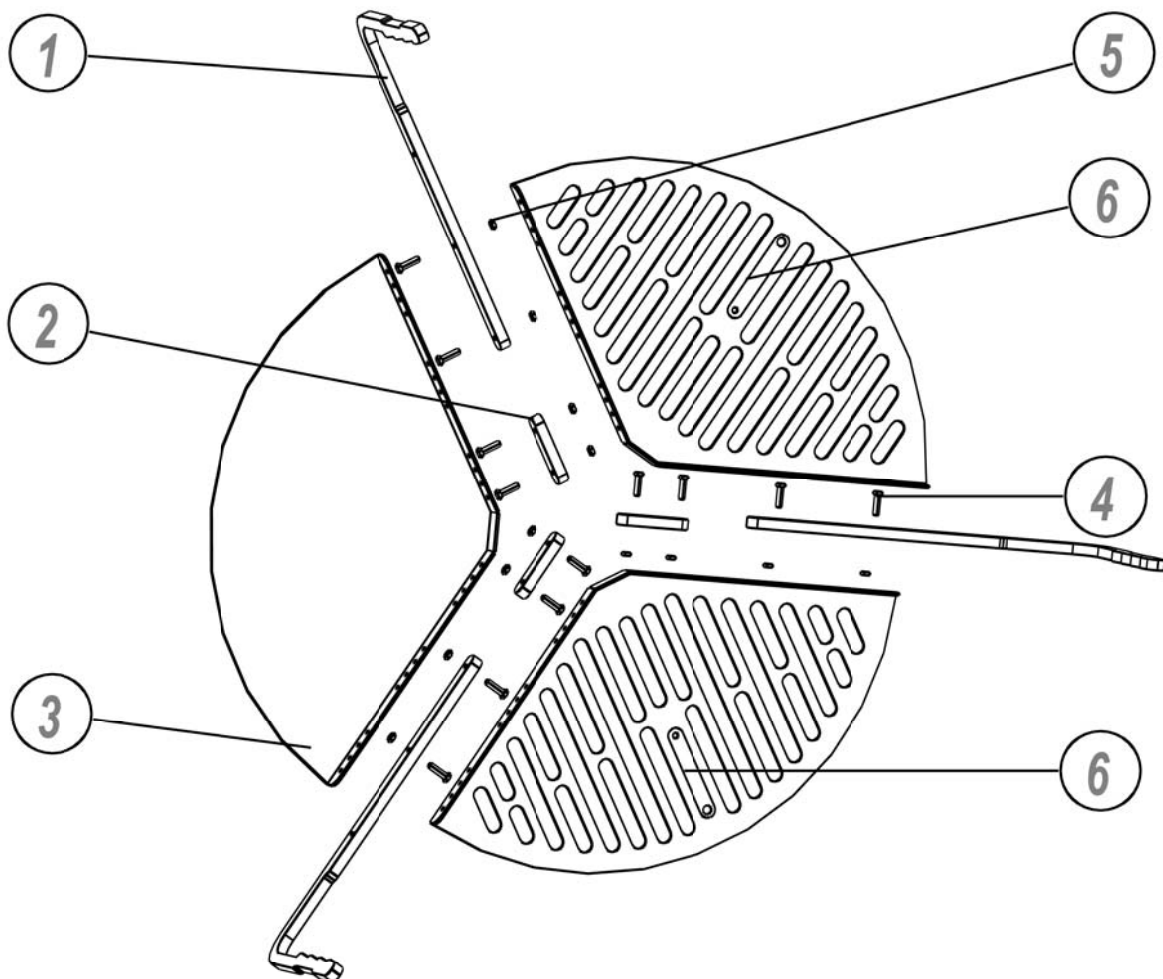

2 ASSEMBLE BRAAI/BBQ COOKING GRATE

NOTE: For tyre diameter 740 mm to 840 mm (29" to 33"). Do not use the spacers (Item 2) provided.

A) Measure the diameter of your tyre. Move the legs to the desired position. If fitting the Grate/Braai to your spare tyre, dry fit to the spare wheel to find appropriate holes. The legs must grab onto the tyre, thus deflecting slightly as you assemble it.

NOTE: The legs might not be placed in the same holes on each leg in order to reach the required diameters.

B) Insert the M5 Hex Nuts and M5 x 20 Hex Bolts, tighten with the Spanner/Wrench provided.

C) If tensioned correctly no extra strapping is required, the legs hold on with enough force.



3 MORE VEHICLE ACCESSORIES

The Braai/BBQ Grate can be used in conjunction with Front Runner wheel steps and tyre covers. Visit our website on www.frontrunner.co.za